

LCS-5250C-L/D-L



Chairman Unit & Delegate Unit



MAIN FUNCTIONS

- 1.Desktop installation ,with aluminum shell design.
- 2.With high quality sound pick-up.
- 3.Support Microphone loop connection.
- 4.Support independent volume adjustment.
- 5.Support independent EQ adjustment.
- 6.Support one button to forbid speech and request speech function.

DIMENSIONAL DRAWING

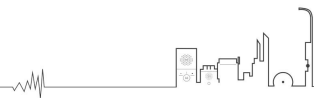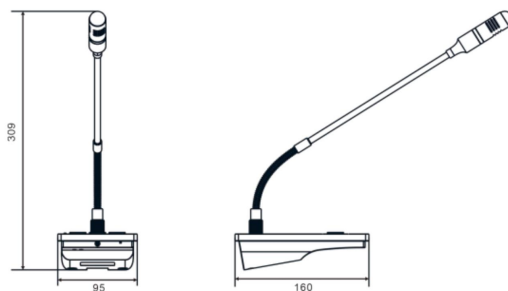

SPECIFICATION

POWER PARAMETERS

Power Supply:DC24V/0.5A

Power Consumption: ≤ 1 W

AUDIO PARAMETERS

Audio Codec:MP3/PCM/ADPCM

Audio Sampling Rate ,Bit Rate:8Khz-44.1Khz,16bit,8Kbps-320kbps

SNR: ≥ 83 dB

Frequency Response:40Hz-18KHz

MECHANICAL & ENVIRONMENTAL PROPERTIES

Mounting Method:Desktop

Installation Environment:Dry Indoor Locations

Product Color:Black

Shell Material:Aluminum

Working Temperature:0°C~+45°C

Working Humidity: $\leq 90\%$, No Condensation

Product Dimensions (mm):160×95×309mm

Warranty:2 Years

INTERFACE

RJ45 Port *2

ACCESSORIES


1×Network Cable(1M)

2×Waterproof Tail Connector

1×Quick Installation Guide


1×Quality Certificate

1×Warranty card

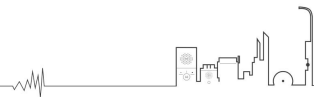

INTERFACE DESCRIPTION

[Chairman Unit]

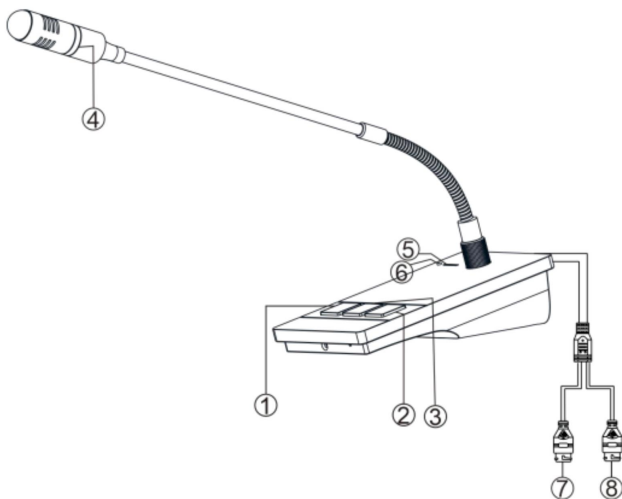

①Allow to speech:When the delegate unit request to speech , the allowed button on the chairman unit will red light flashing ,after allowed the request , the light turn off ; If no delegate unit request to speech , the lighth will keep turn off.

②Forbid to speech:When the chairman unit press the forbidden button ,the mic pole and request button of the delegate unit will turn off ,the forbidden button on the chairman unit will keep red light turn on ,when unforbidden the speech ,the light will keep turn off.

③Request to speech:The chairmen unit press the speech button ,the red light will turn on , if no request to speech ,the light will turn off .


④Mic Pole Status Light:Request to speech ,the red light will turn on ; No speech request ,the light will keep off.

⑤Microphone Loop Status Indicator: power-on but abnormal login, the chairman unit self-test fault microphone flashing orange, power-on and normal login, steady orange;

⑥Power Indicator: when the chairman unit is connected to the conference splitter, it will be steady red, and when the chairman unit is not connected, the light will be off.


⑦White Network Port:Connect with the Out port of conference splitter.

⑧Black Network Port:Connect with the white port of the delegate unit.

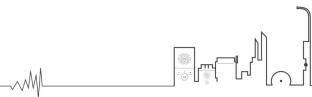

INTERFACE DESCRIPTION

[Delegate Unit]

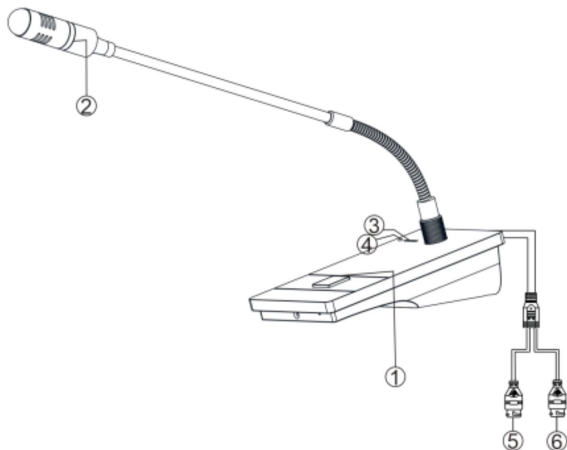

①Request to speech: The request button of the delegate unit is red, and the light is off when there is no speech.

In request mode: The delegate unit request speech button blinks red; if the request is not allowed, the delegate unit blinks red; the chairman allowed button blinks red; after allowed, the delegate unit lights up red.

②Microphone Pole Status Indicator: Request to speak red Steady on and off before speaking.

 
In request mode: Red light flashing when the Chairman unit allow the speech ,if not allowed , the delegate unit will red light flashing ,after allowed ,the delegate unit will red light constantly on.

③Microphone Loop Status Indicator: power-on but abnormal login, the delegate unit self-test fault microphone flashing orange, power-on and normal login, steady orange;

④Power Indicator: when the delegate unit is connected to the chairman unit, it will be steady red, and when the delegate unit is not connected, the light will be off.

⑤White Network Port:Connect with the Out port of conference splitter.

⑥Black Network Port:Connect with the white port of the next delegate unit .



CONNECTION DIAGRAM

