

SPON

CLOUD WALL MOUNT AMPLIFIER

User Manual

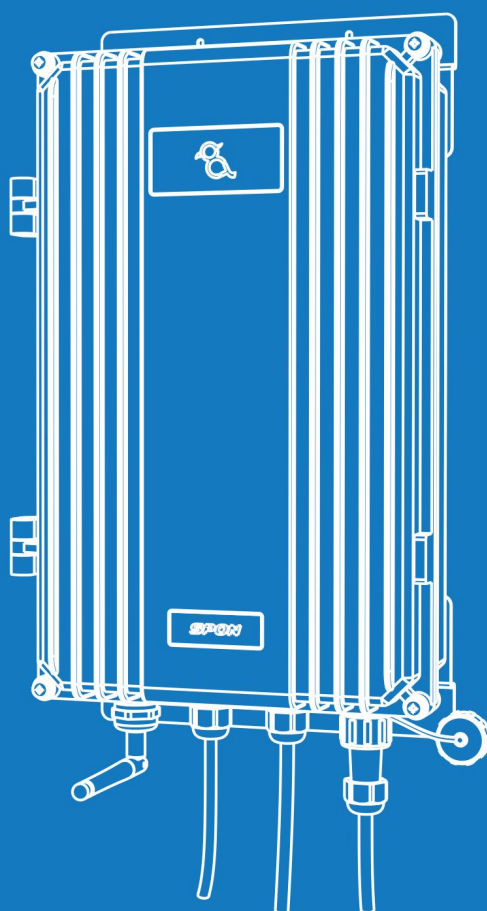


Table of Contents:

- 1. Important Safety Precaution
- 2. Product Overview
 - 2.1 Basic Introduction
 - 2.2 Product Features
 - 2.3 Hardware Interface Description
- 3. Unpacking and Installation
 - 3.1 Wiring
- 4. Quick Operation Guide
 - 4.1 Logging Into the Cloud Server
 - 4.2 Logging Into the SIP Server
 - 4.3 Network Settings
 - 4.4 User-Defined Terminal Parameter Settings
 - 4.5 Basic Functions

1. Important Safety Precaution

Please read this User Manual carefully before using this product and follow all the safety precautions mentioned herein.

During Installation:

(1) Avoid humidity:

Please do not expose the device to rainy environment or other humid environment, otherwise it may lead to fire or electric shock.

(2) Use correct power supply:

Please use the specified power adapter for the device, using high voltage power supply may lead to fire or electric shock.

(3) Protect the electric wire:

Do not scratch, cut or twist the power cord, keep the power cord away from any heating device, do not place heavy objects on top of the power cord, otherwise it may lead to fire or electric shock.

During Use:

(1) If anything goes wrong:

During use of this device, if any of these anomalies mentioned below happens, please cut off the electricity immediately, otherwise it may lead to fire or electric shock.

- smoke or strange smell coming out of the device.
- water or other foreign object gets into the device.
- damage on the product shell.
- damage of the power cord (cable core exposed or broken).
- malfunction of the device (no network connection or no sound).

(2) Do not open the product shell:

There are high voltage parts inside of the product shell, opening the product shell without permission may lead to fire or electric shock.

(3) Do not touch the device when it thunders:

To avoid electric shock, please do not touch the device or power plugs when it thunders.

(4) Do not place liquid containers on top of the device:

If accidentally knock over the liquid container and let any liquid get into the device, it may lead to fire or electric shock.

(5) Cautions when the device is not in use:

If the device is not in use for 10 days or longer, please cut off the electricity and unplug the power plug from the power socket, otherwise it may lead to fire or electric shock.

2. Product Overview

Here is what you can find in this section:

- **2.1 Basic Introduction**
- **2.2 Product Features**
- **2.3 Hardware Interface Description**

2.1 Basic Introduction


Cloud Wall Mount Amplifier is embedded with IP Audio digital network technology which has intellectual-property rights of SPON. Industrial grade hardware, higher stability. Local hardware linkage, without response delay. All-weather outdoor design, fearless of wind, rain and extreme temperatures.



2.2 Product Features

- Cast aluminum box body: all-weather design, stronger corrosion resistance, waterproof grade up to IPX6.
- Digital power amplifier: efficiency up to 90%. 2 channels 30W constant resistance power output.
- Hardware linkage: Trigger built-in storage files, efficient and reliable.
- Audio input: 1 channel audio input, it can cooperate with outdoor large screen make sound reinforcement.
- APP operation: Support APP real-time shout, remote operation and other functions.

2.3 Hardware Interface Description

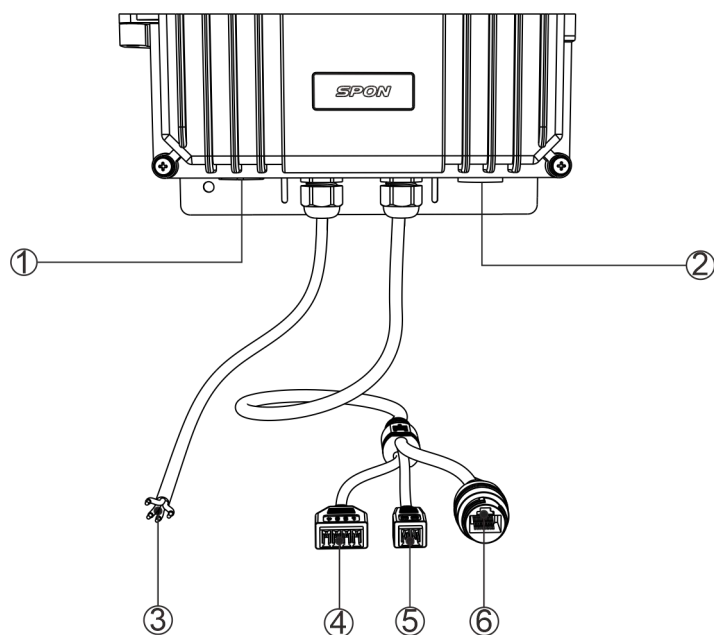


- ①Antenna interface
- ②Power input interface
- ③Power output interface
- ④Line in interface
- ⑤Alarm in interface
- ⑥RJ45 network interface
- ⑦Power input interface:AC220 power input.

3.Unpacking and Installation

Here is what you can find in this section:

- **3.1 Wiring**

3.1 Wiring

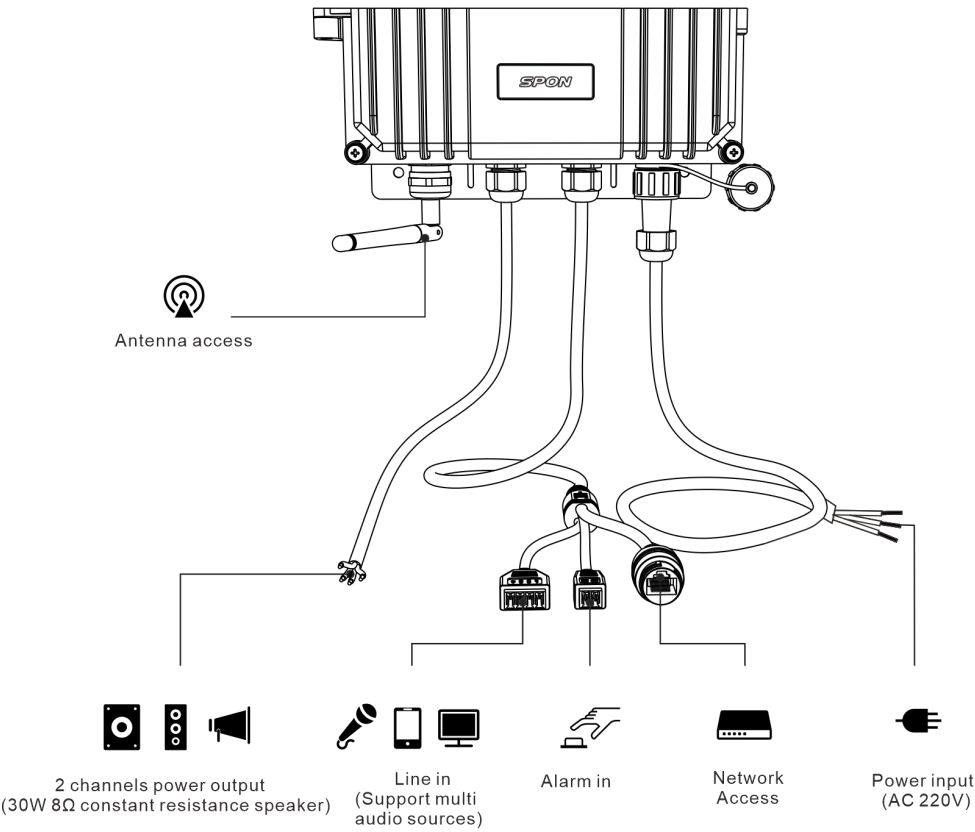

4. Quick Operation Guide

Here is what you can find in this section:

- **4.1 Logging Into the Cloud Server**
- **4.2 Logging Into the SIP Server**
- **4.3 Network Settings**
- **4.4 User-Defined Terminal Parameter Settings**
- **4.5 Basic Functions**

4.1 Logging Into the Cloud Server

The terminal can log in to our company's cloud server and be managed by YUNQUE APP, and perform related configuration and operations. For details, please refer to the YUNQUE APP User Guide.

4.2 Logging Into the SIP Server

The terminal can log in to the SIP server and perform related configurations and operations. For details, please see below.

4.3 Network Settings

Basic network setting


After connecting the terminal according to the Quick Installation Guide, and then power on, and change the network parameters of the terminal according to the site environment:

Enter the web interface of the Cloud Wall Mount Amplifier, modify the network parameters according to the site environment, and click Save. For details, please see the network parameters settings in User-defined Terminal Parameters.


4.4 User-Defined Terminal Parameter Settings

Login Web page

(1) Please input the IP address of the Cloud Column Loudspeaker(the factory defaults is 192.168.1.101) into the address bar of the web browser, then press Enter.

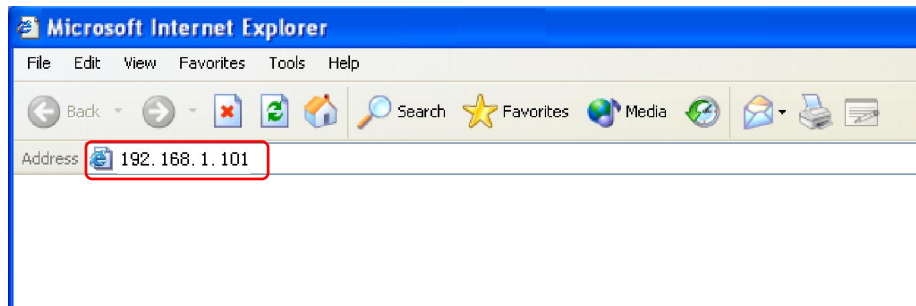

(2) Please input the user name and password in the login window of the Web page (The defaults username and password are both admin).

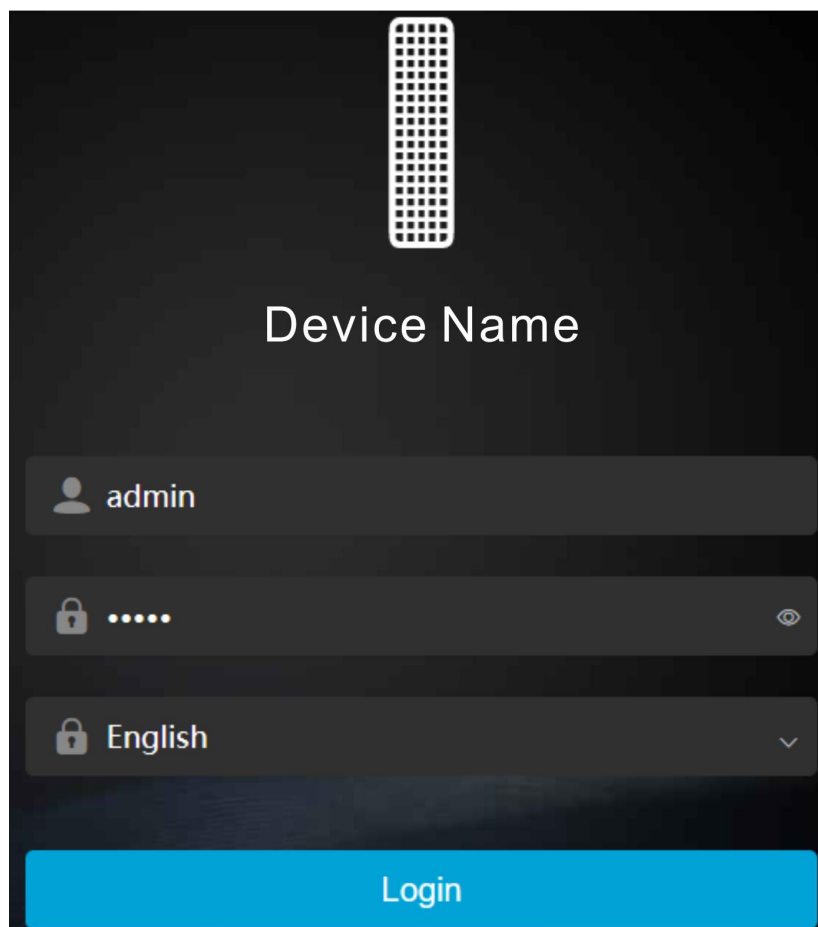

(3) Press enter to login to the web page of the Cloud Wall Mount Amplifier.(Note: The screenshots in this document are for reference only. For details, please see the actual page.)

System Configuration

Network Configuration

Please modify the network parameters according to the site environment.

Wired

When the device is connected to the network through the RJ45 network port, please modify network parameters under wired according to the site environment.



Parameter Settings are as follows:

Setting IP address	Support Manual and Automatic IP-setting. Manual:The user can custom IP address related network information,the default is manual IP-setting. Automatic: IP addresses are allocated dynamically through DHCP.
IP Address	The IP address of the device,which cannot be duplicated with other terminals. The default is 192.168.1.101.
Gateway	The gateway of the network where the terminal located.
Subnet Mask	The subnet mask of the network where the terminal located.
Main DNS	The IP address of the main domain name resolver of the network where the terminal located.
Secondary DNS	The IP address of the secondary domain name resolver of the network where the terminal located.

Wireless

When the device is connected to the network through wireless, please modify network parameters under wireless according to the site environment.

Device Configuration (Device Name) admin

System configuration

Network Configuration

Wired Wireless

Mode: Hotspot

Account Number: NXT2401_0327

Password: 12345678

Server Configuration

Endpoint ID: 1

Endpoint Port: 2046

Server IP Address: 192.168.13.100

Server Port: 2048

Standby Server IP Address: 192.168.1.14

Standby Server Port: 2048

Save

Input Channel

Sound Reinforcement

Alarm Input

Bluetooth Configuration

Other

Please operate carefully

Front Panel Back Panel

Parameter Settings are as follows:

Mode	Hotspot and WLAN are optional. Hotspot: When the device is connected to a wired network, select the hotspot mode to turn the terminal into a hotspot as a wireless AP to provide a wireless network. WLAN: When the device is connected to WIFI, please select the WLAN mode.
Account Number	Set the WIFI account of the hotspot or fill in the WIFI account to be connected.
Password	Set the WIFI password of the hotspot or fill in the WIFI password to be connected.

Server Configuration

Set the protocol parameters for the normal communication between the terminal and the server. After the modification, click [Save] to restart the device to take effect.

The screenshot displays the 'Device Configuration' web interface. The left sidebar contains a navigation menu with 'System configuration' and 'Network Configuration'. Under 'Network Configuration', the 'Wired' tab is selected. The settings include: 'Setting IP address' set to 'Automatic', 'IP Address' as '192.168.1.100', 'Gateway' as '192.168.1.1', 'Subnet Mask' as '255.255.255.0', 'Main DNS' as '211.142.211.124', and 'Secondary DNS' as '192.168.1.1'. The 'Server Configuration' section shows 'Endpoint ID' as '1', 'Endpoint Port' as '2045', 'Server IP Address' as '192.168.13.100', 'Server Port' as '2048', 'Standby Server IP Address' as '192.168.1.14', and 'Standby Server Port' as '2048'. The main area features a 3D model of the device with 'Front Panel' and 'Back Panel' view toggles. On the right, there are dropdown menus for 'Alarm Input', 'Bluetooth Configuration', 'Other', and a warning 'Please operate carefully'. The top right corner shows the user 'admin'.

Parameter Settings are as follows:

Endpoint ID	Unique number that identifies the device. It cannot be the duplicated with other terminals
Endpoint Port	Device port. Note: The port should not be modified casually except it has special needs.
Server IP Address, Sever Port	The server IP address and port which device log in. The port should not be modified casually except it has special needs.
Standby Server IP Address, Standby Server Port	The standby server IP address and port which device log in. The port should not be modified casually except it has special needs.

Input Channel

Set the input channel parameters.



Parameter Settings are as follows:

Input	The name can be customized. Set the total volume of the device line in interface (0 to 15).
-------	--

Sound Reinforcement

Set sound reinforcement related parameters.



Parameter Settings are as follows:

Sound Reinforcement	Set whether to enable sound reinforcement function. When it is enabled, and there is no broadcast task.The speaker of the device can make the line input audio reinforced output. The priority of local sound reinforcement is the lowest.
Sound Reinforcement Area	Select sound reinforcement area.
Volume	Set the volume of local sound reinforcement(0 to 15)
Trigger Sensitivity	Set the sensitivity (0 to 15) of triggering the local sound reinforcement.

Output Channel

Set output channel related parameters.



Parameter Settings are as follows:

Output 1	The name can be customized. Set the total volume of the device power output 1 interface (0 to 15).
Output 2	The name can be customized. Set the total volume of the device power output 2 interface (0 to 15).

Alarm Input

Set the alarm trigger mode, playback source, and broadcasting area of the device's four alarm input interfaces. **Note: Alarm tasks set on the WEB interface are only available locally and will not be uploaded to the server.**



New Alarm Task [X]

Task Name:

Trigger Mode:

Trigger Mode:

Playback Source:

Playback Duration:

Times of Repetition: ☒

Broadcasting Area:

Parameter Settings are as follows:

Task Name	The task name of alarm input can be customized.
Trigger Mode	Pulse mode: it will trigger alarm if received pulse signal; Level mode: it will trigger alarm if received level signal.
Trigger Mode	Closed circuit trigger: it will trigger alarm if the alarm input port is closed; Open circuit trigger: it will trigger alarm if the alarm input port is opened.
Playback Source	Select the audio file for alarm.
Playback Duration	Set the playback duration of the alarm file.
Times of Repetition	Set the number of times the alarm file is played repeatedly. If the parameter is set to disable, the playback is not repeated.
Broadcasting Area	You can select any audio output channel to play the alarm audio file.

Bluetooth Configuration

Set the Bluetooth related parameters.




Parameter Settings are as follows:

Bluetooth Password	Set the password of the Bluetooth.
Broadcasting Area	Select Bluetooth broadcasting area.

Other

Audio Management: The uploaded audio can be used as local alarm input audio.

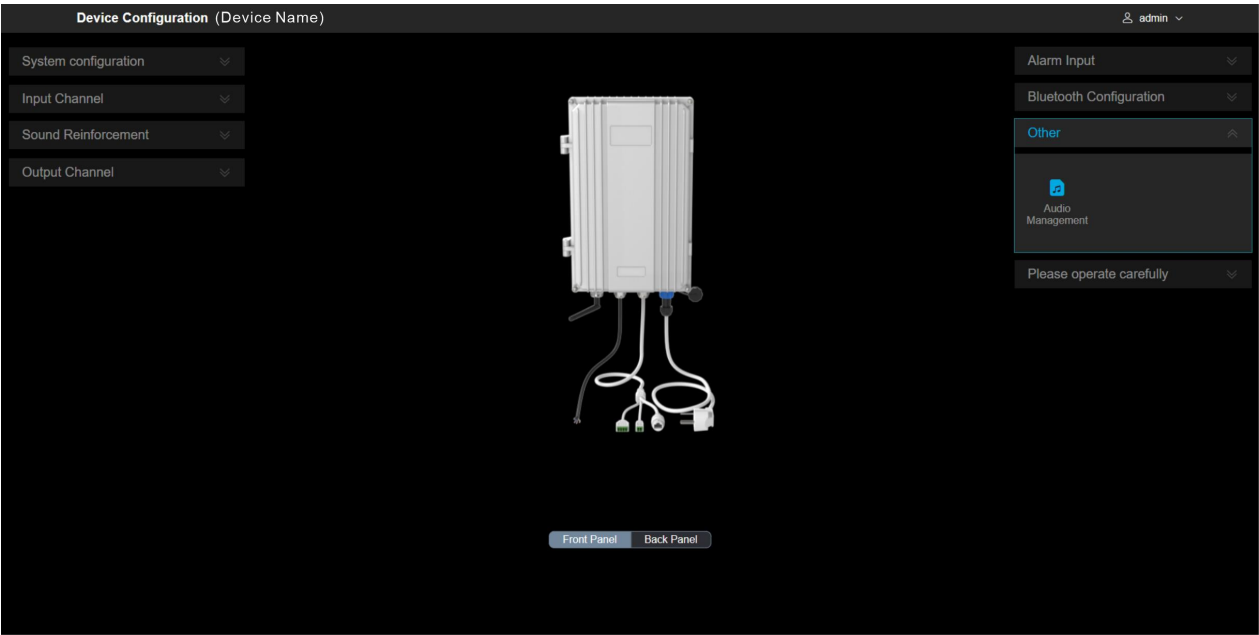


Please Operate Carefully

Firmware Upgrade: Click "Firmware Upgrade", then click "Browse", select the firmware upgrade file provided by the manufacturer, and click the "Firmware Upgrade" button to start the upgrade.

Note: Do not power off during the upgrade. Otherwise, the upgrade may fail and the device may be faulty. The upgrade process takes about 120s. After the upgrade, the device and web page will automatically restart. (Do not upgrade firmware unless there is a special need)

Device Reboot: Click "Device Reboot" button can manually reboot the device.

Restore Default Settings: Click this button to restore all parameters of the device to the factory Settings (please use it with caution).

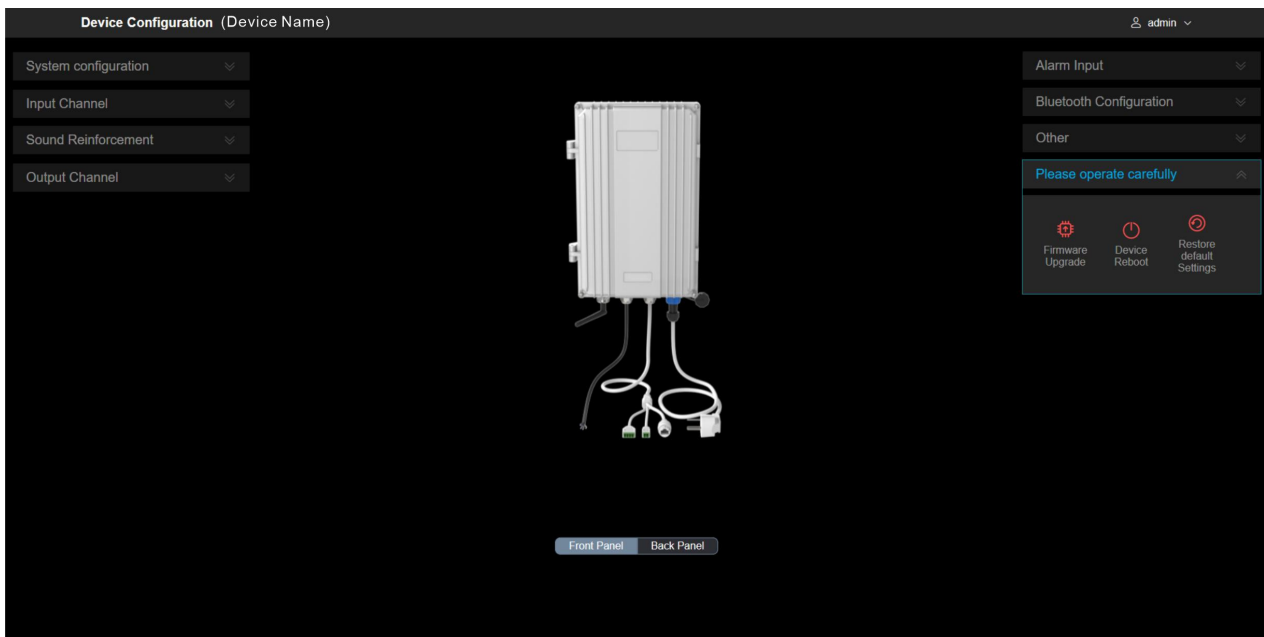

Other Function

In addition to the above functions, the Cloud Wall Mount Amplifier can also cooperate with the server to realize the functions of timing ringing, real-time broadcasting. For details, please see the user guide of the service software.

4.5 Basic Functions

Receive Broadcast

The device can receive broadcasts initiated by other terminals. It will answer automatically, no need to pressing a button.

Sound Reinforcement

When the sound reinforcement function is enabled, and there is no broadcast task. The power output interface of the device can make the line input audio reinforced output.

Copyright Announcement

Copyright

The manual, which is created or developed on the basis of SPON copyright, is the intellectual property of SPON. Without prior written consent by SPON, any reproduction, modification, or retransmission, in any form or by any means, is illegal and strictly prohibited.

In accordance with relevant laws, translation and conversion are contained in reproduction.

Only for private use, downloading and printing of the manual is not prohibited when it is spreading on internet and media.

No part of the manual is allowed to be reproduced or used for commercial purpose. And SPON shall take no responsibility for any losses or damages caused by the illegal reproduction and conversion of the manual.

Warranty

The manual is subject to modification, and there is no further notice if it is modified. Accurate statement, information and suggestion are provided in the manual to the best. But any expression or implication are not guaranteed by SPON, and users bear full responsibility for the application of product.

SPON made no guarantee about the manual, including but not limited to any contained marketability or specific guarantees.

SPON bears no responsibility for any indirect or incidental losses caused by improper use of the manual.



Wechat

SPON Communications Co., Ltd.
www.sponcomm.com
Service Hotline: +86-731-85570190
Reserve the amendment right without notice

